

Fig. 1

|     |         |     |                 |     |                 |     |                       |     |        |
|-----|---------|-----|-----------------|-----|-----------------|-----|-----------------------|-----|--------|
| K1  | DVD     | K2  | AUX/Cabl        | K3  | VCR             | K4  | TV2                   | K5  | TV1    |
| K6  | MENU    | K7  | Adjustment<br>- | K8  | Adjustment<br>+ | K9  | Function<br>selection | K10 | Sete   |
| K11 | Power 2 | K12 | TV/AV           | K13 | Mute            | K14 | Power 1               | K15 | disply |
| K16 | 1 (Aa)  | K17 | 2 (Ao)          | K18 | 3 (B)           | K19 | Volume - (Pa,Q        | K20 | F 1 /  |
| K21 | 4 (C,D  | K22 | 5 (E,F          | K23 | 6 (G            | K24 | Volume + (Ph          | K25 | F 2 /  |
| K26 | 7 ( F   | K27 | 8 ( H           | K28 | 9 (I,J          | K29 | Channel - ( O         | K30 | F 3 /  |
| K31 | 10 (K,L | K32 | 0 (Ma           | K33 | RET(Mi          | K34 | Channel + ( N         | K35 | F 4 /  |
| K36 | STOP(R  | K37 | PLAY (Sa        | K38 | REW (sc         | K39 | FF ( so               | K40 | ADD/   |
| K41 | REC(xyz | K42 | Pause(uvw       | K43 | CATV( To        | K44 | MTS( Ta               | K45 |        |

Fig. 2

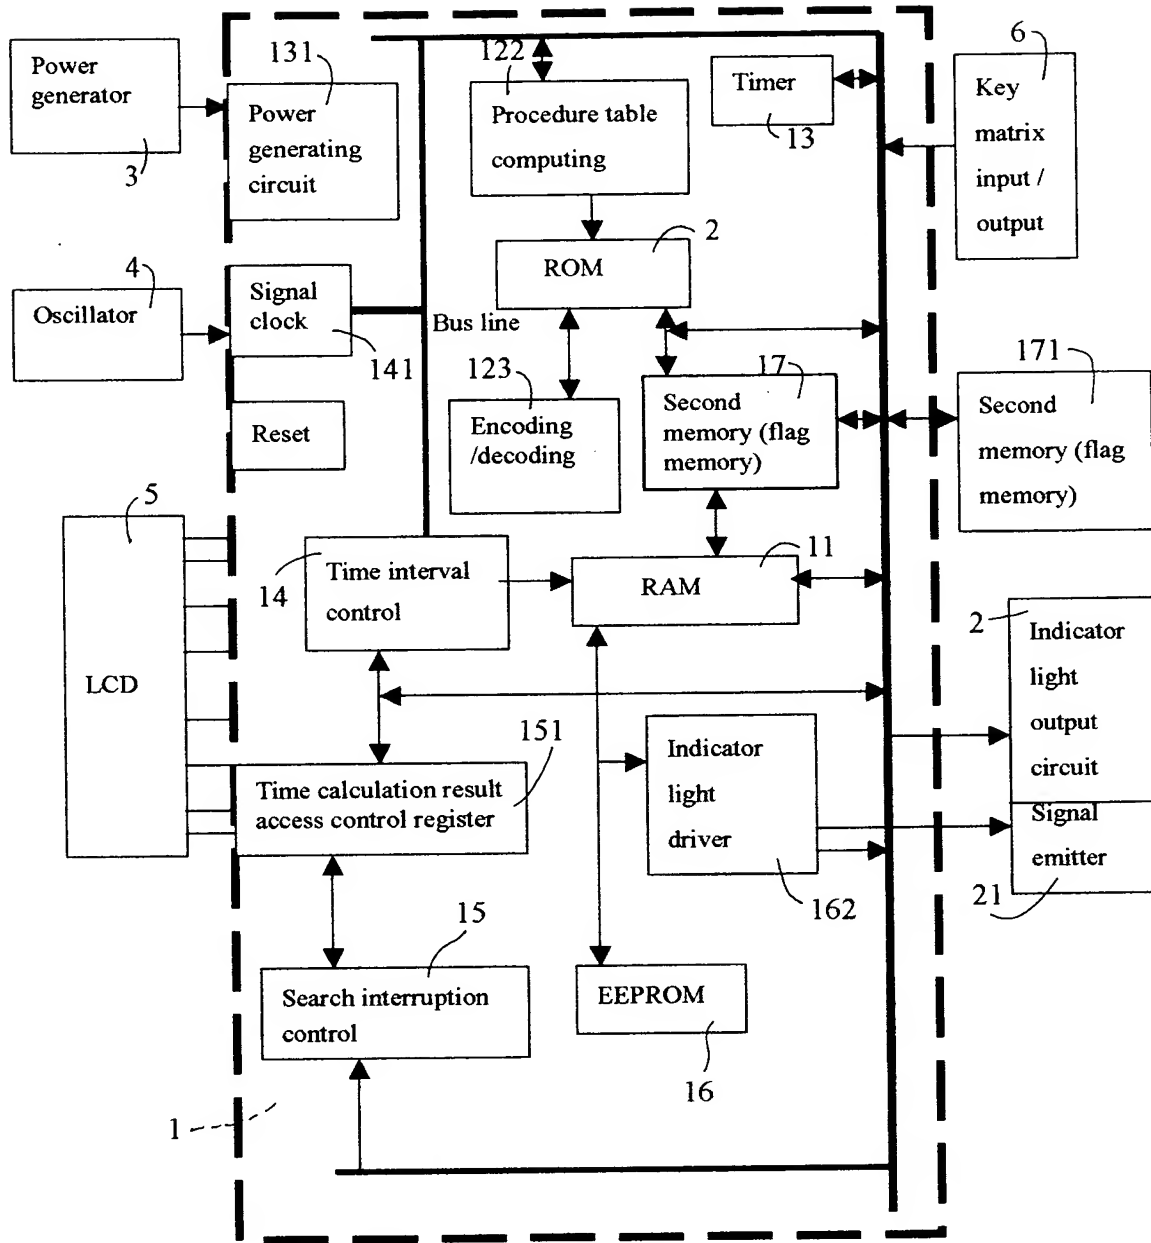


Fig. 3

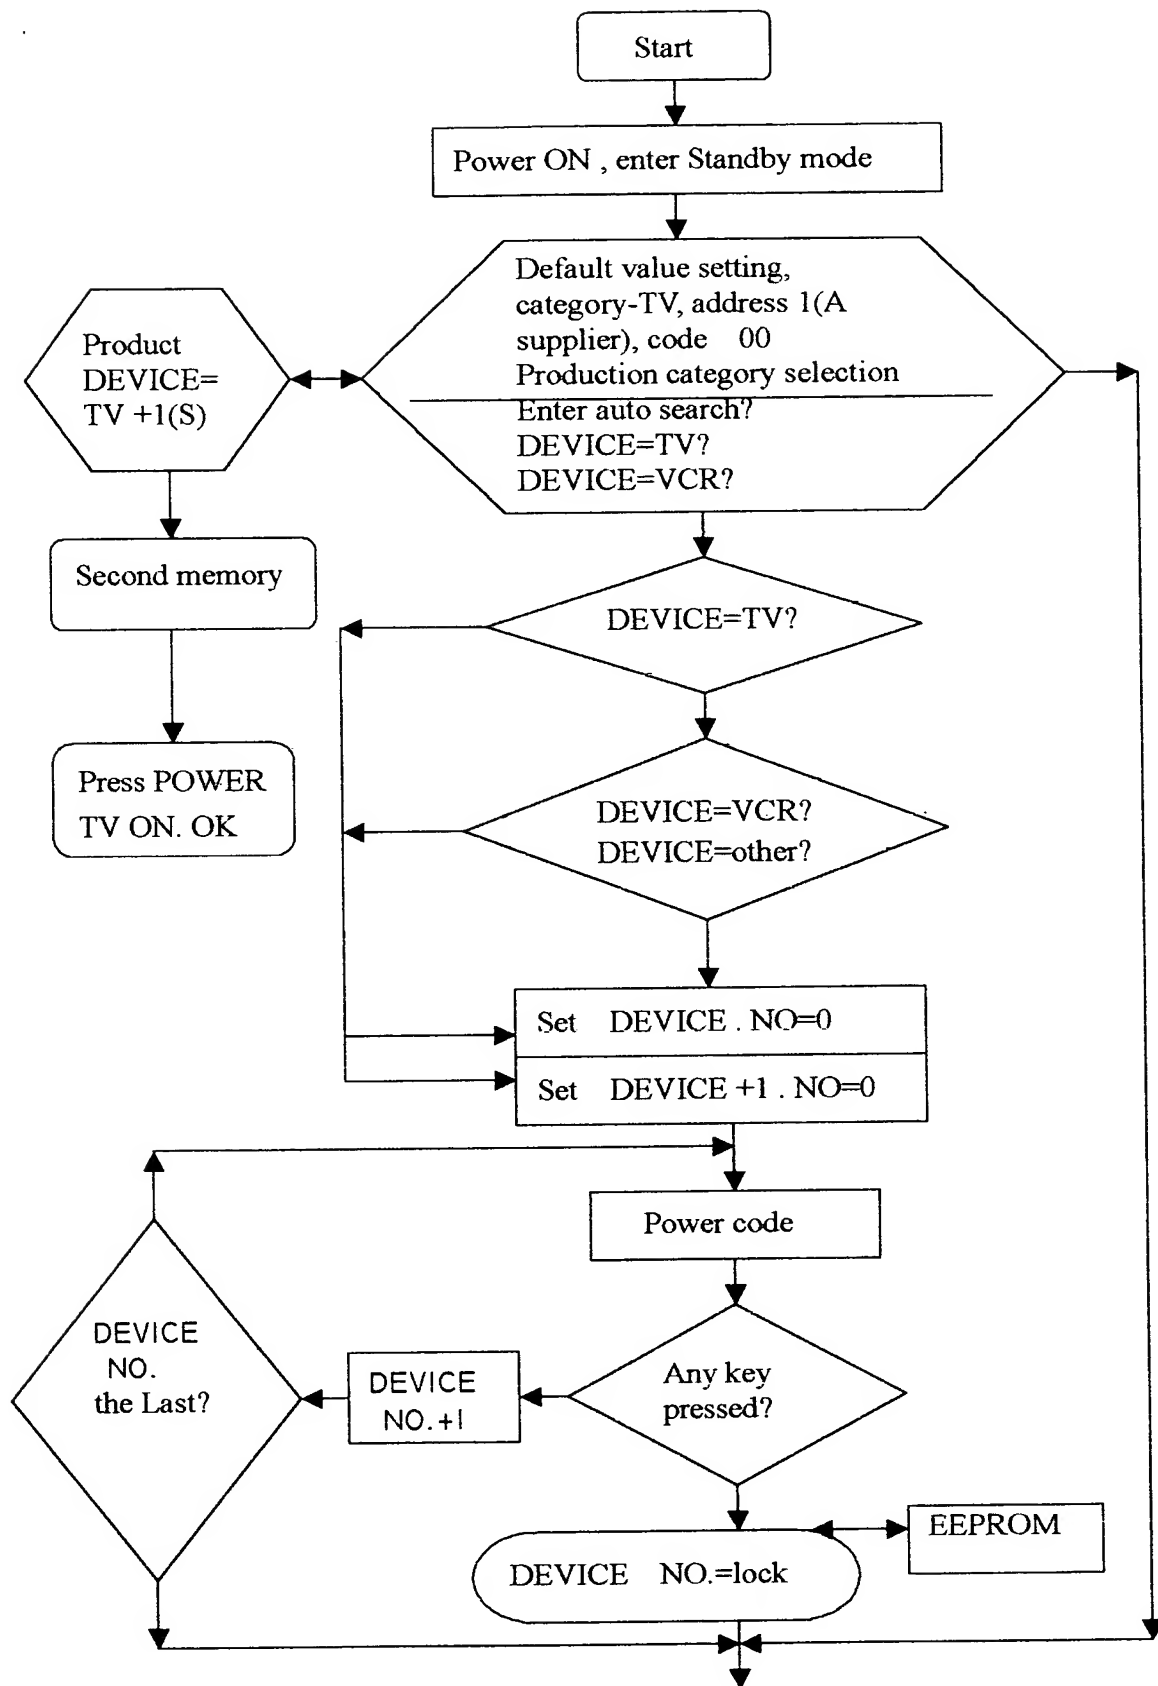


Fig.4

Left auto searching

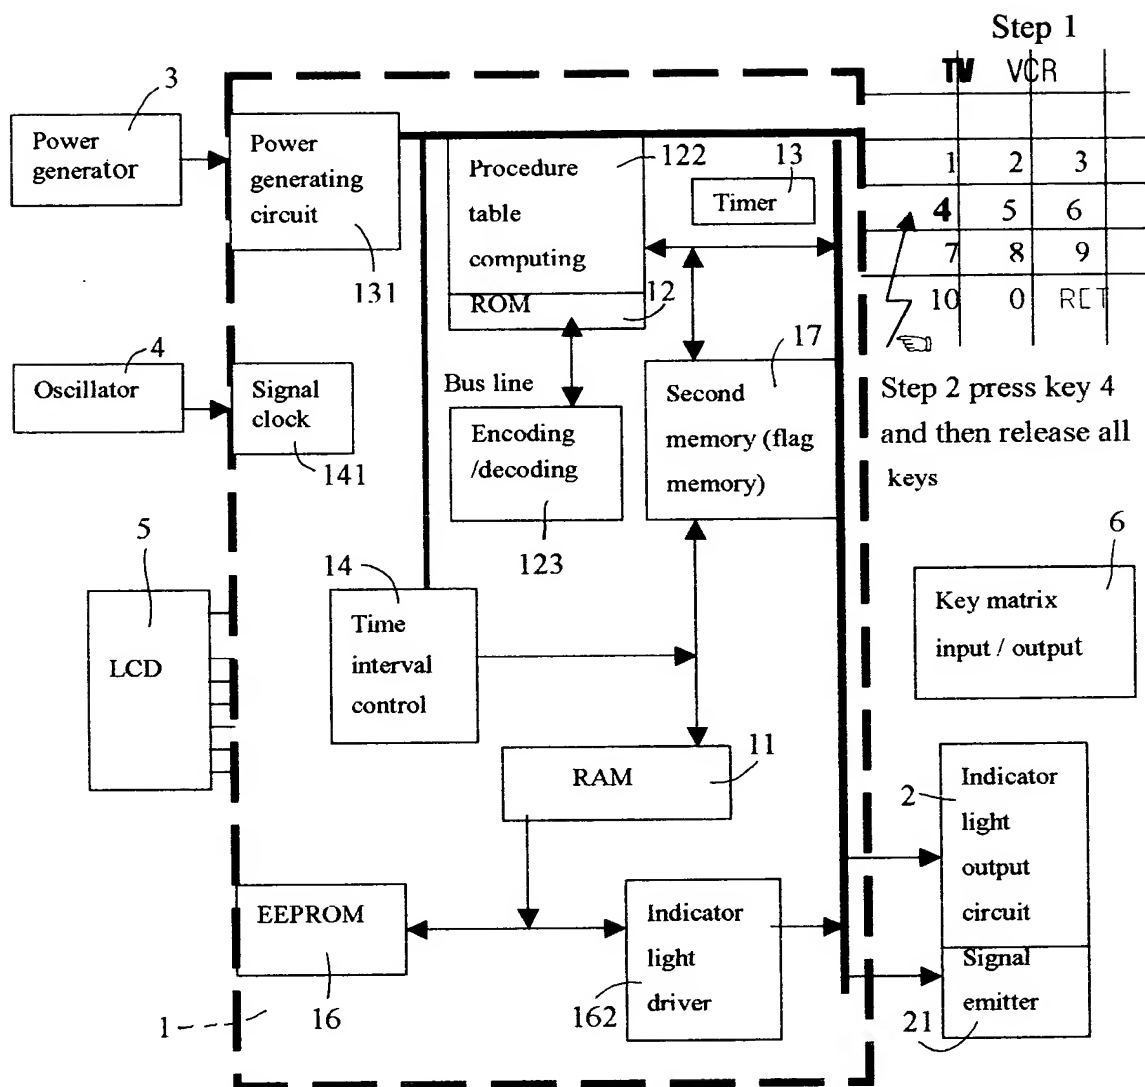


Fig. 5

Step 1 keeps the key TV pressed

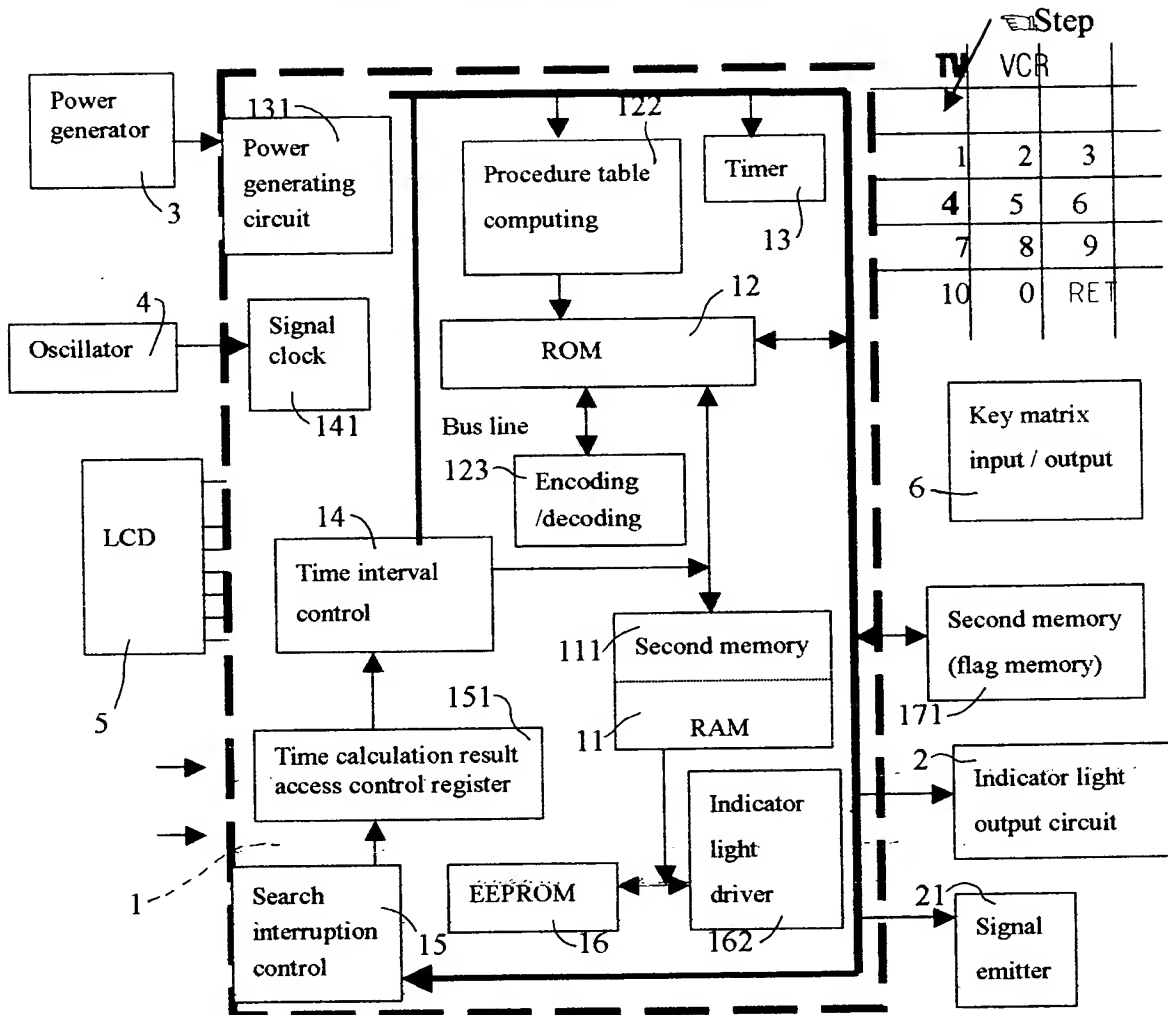


Fig. 5-1

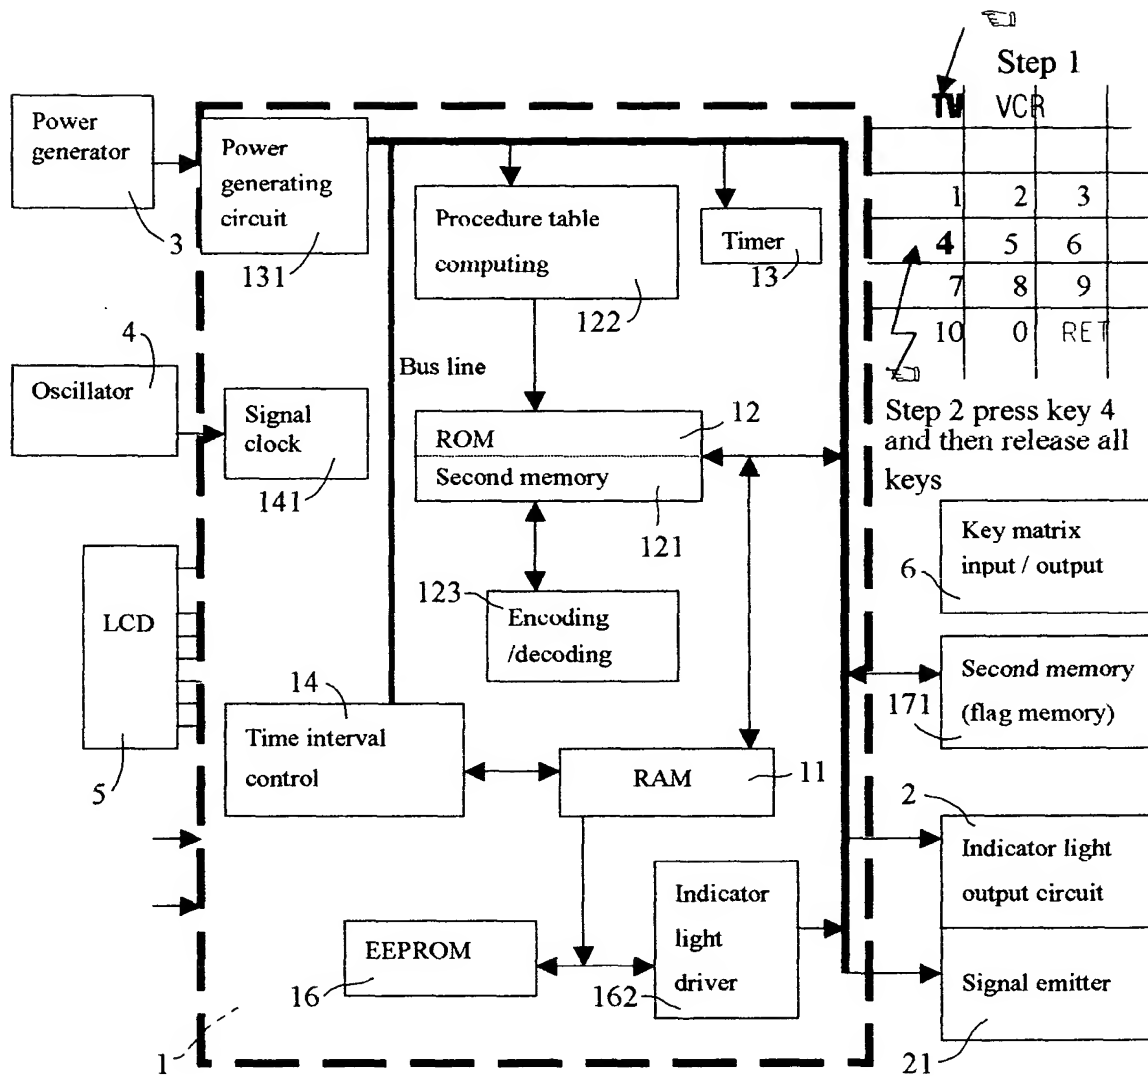


Fig. 5-2






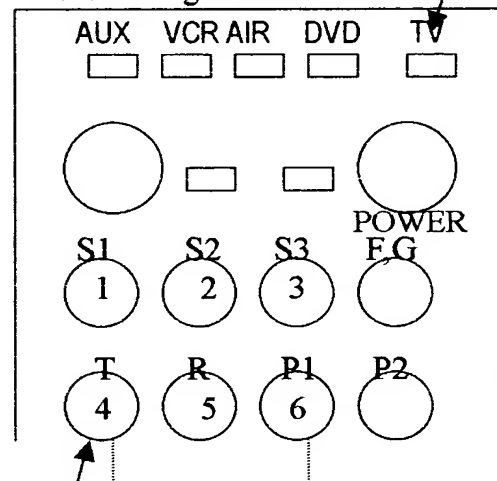
Fig. 6



Single-key auto search setting

**Fig. 7A**

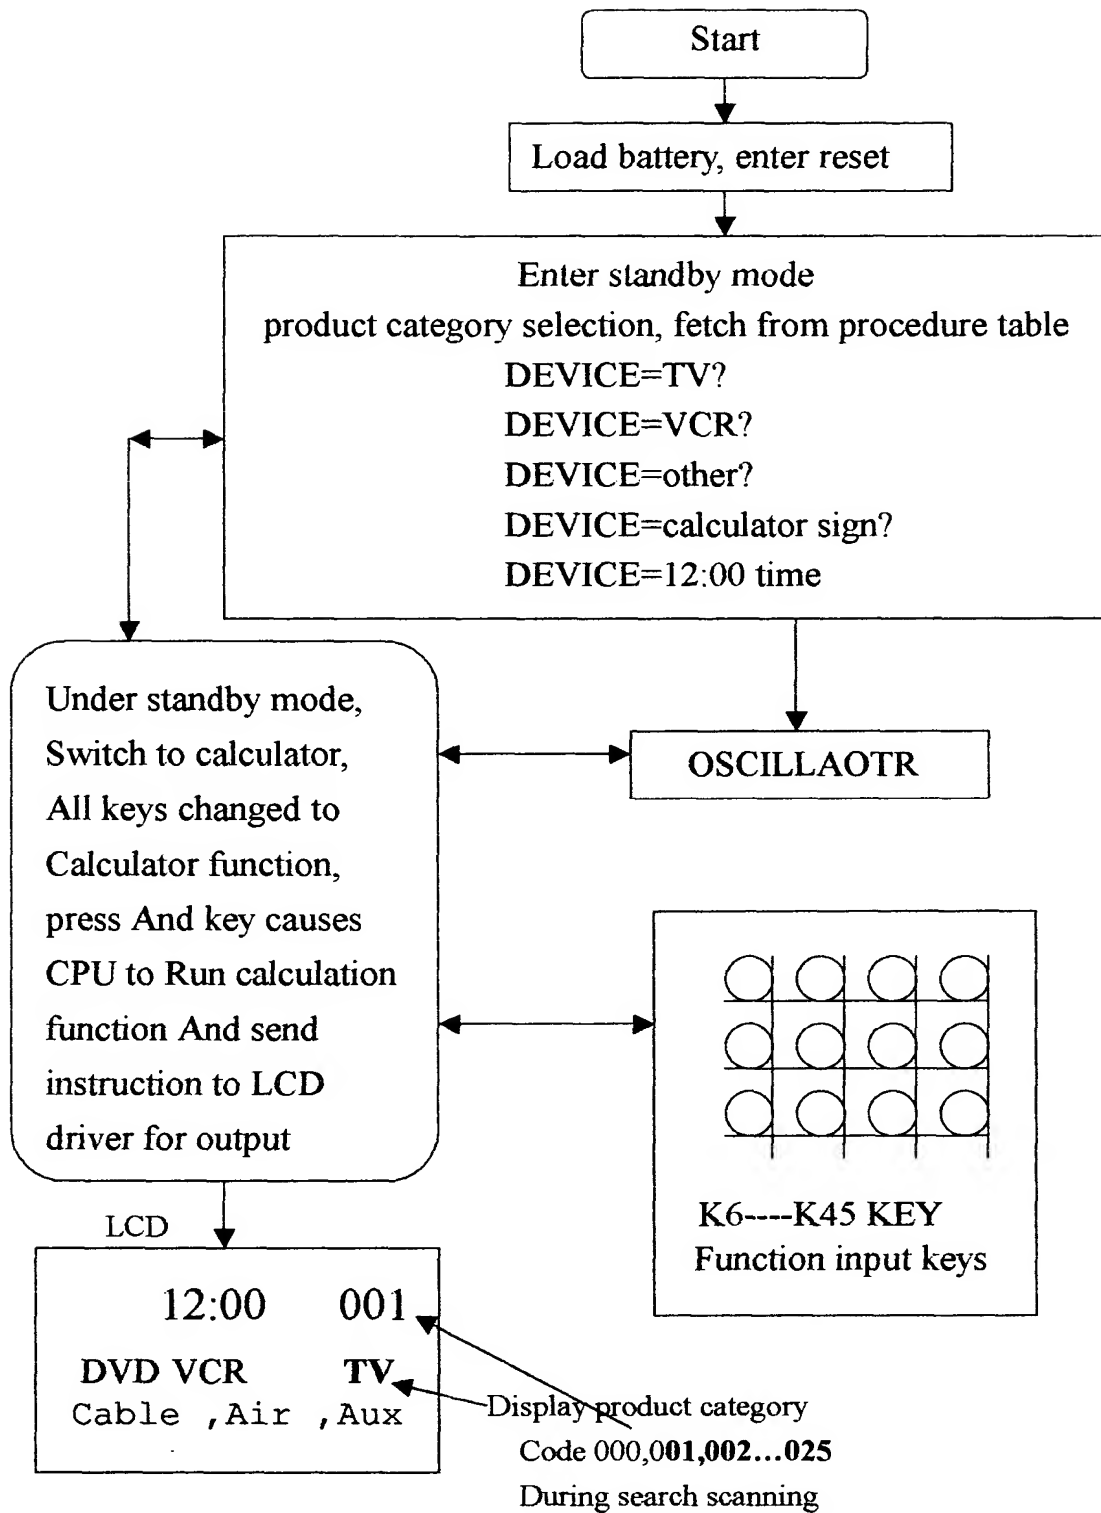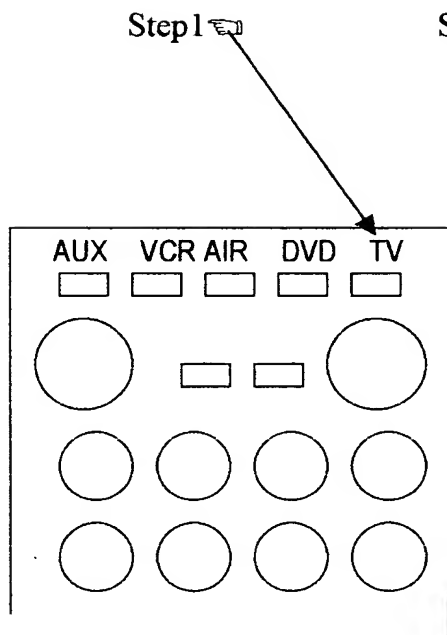Step 1  Keep category TV key pressed, indicator light is on



Step 2 , press key 4 and then release both keys

Product model single code direct setting

**Fig. 7B**



Time setting Step 1 Press category selection key to show 12:00 flashing on LCD

Step 2 Press power key

Step 3 press numerical keys 0,1,2~9

Step 4 Press subscribing power key

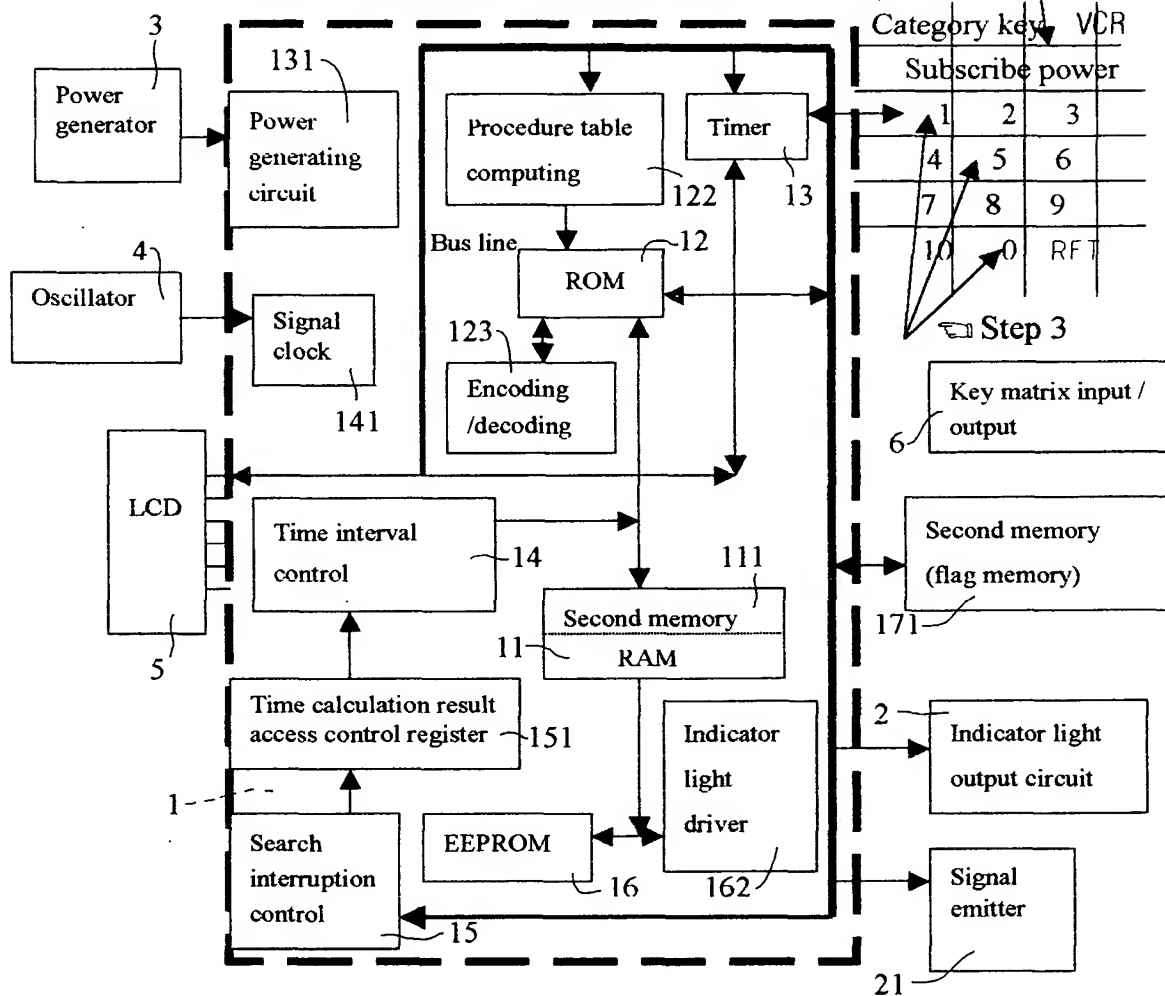


Fig. 8